


GPS SECURITY AND MONITORING SYSTEM FOR INDUSTRIAL MACHINES



www.eurotact.com

The system is primarily designed for monitoring of industrial machinery (construction and agriculture machines, logging machines, cargo trucks) and gensets.

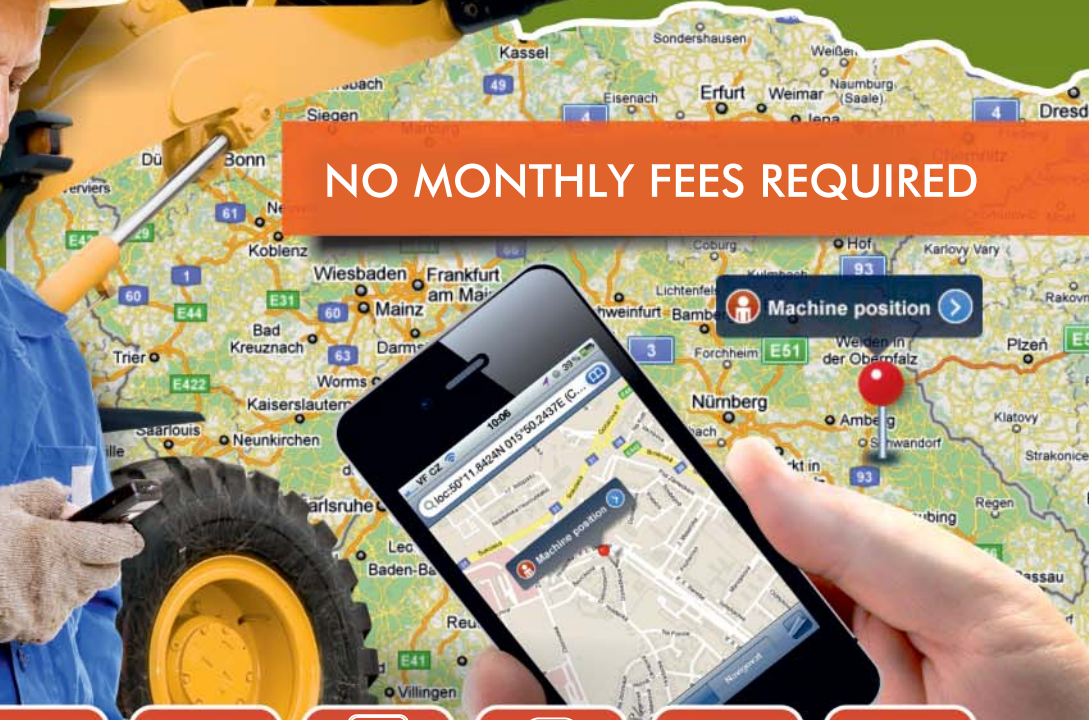

NO MONTHLY FEES REQUIRED





GPS SECURITY AND MONITORING SYSTEM FOR INDUSTRIAL MACHINES

In case the monitored machine is stolen or in case of a fuel theft the system will automatically activate alarm and the owner of the machine (despatcher) will immediately receive an alarm SMS to his mobile phone. In case the stolen machine is moving next SMS's with GPS data are sent automatically during the whole period.

The owner can view a map with a machine position directly on the mobile phone display just by clicking on the link in a received SMS. In case the mobile phone does not support internet it is possible to view the machine position via computer using special internet webpage. All services connected with an object positioning in a maps are provided free of charge.



Very low operating costs are next important advantage of the whole system. Communication takes place only through SMS's between the unit installed in the machine and mobile phone. There is no need to pay any monthly flat fees for assistance services providing localization and monitoring, the only cost is for sent SMS's to a chosen mobile provider.

A significant advantage of the system is an instant localization of the machine directly from the mobile phone using SMS. It is possible to reach any machine on the ground at any time and view its current position. Thanks to this function it is possible to check whether the machine operates at a particular location and the staff does not misuse it for other works in other locations.

The main part of the system is a central unit and an external GPS antenna. The unit can be optionally connected to a fuel monitoring sensor. Central unit can be fitted with a prepaid or a contract SIM card of any mobile provider. The whole system can be secured by a back up battery, which ensures operation for 30 hours in case the main power supply is disconnected.

DIRECT LOCALIZATION ON YOUR MOBILE PHONE OR ON THE INTERNET



www.eurotact.com

Machkova 587
500 11 Hradec Králové
Czech Republic

phone: +420 495 056 226
email: info@eurotact.com

SATMAPS.NET

Please enter GPS coordinates in the same format as in received SMS

Latitude: Longitude:

Show position on map

Example:

Latitude: 50d11.2785N Longitude: 015d49.7612E

Position and speed of your car: 50d11.2785N 015d49.7612E
0km/h 08.04.10 14:12:47GMT +01:00h

Map images provided by Google Maps